

HOW TO USE

CLEANSING MODE:

1. Hold the Power key down for 3 SECONDS. The power light will switch on and the DermaTool will start in **CLEANSING MODE**.
2. Select the desired sonic speed by pressing the Speed button (1-2-3 SPEEDS, 3 BEING THE HIGHEST VIBRATING STRENGTH). Gently move the brush around the face in small circular motions.
3. The DermaTool features a 1 minute timer in **CLEANSING MODE** that beeps after 10 - 20 - 20 - 10 SECONDS. We recommend 10 seconds for the forehead, 20 SECONDS for cheek/nose area, 20 seconds for the other cheek/nose area and 10 SECONDS for the chin. The DermaTool will stop automatically after 1 MINUTE. To restart the timer before it stops, just press any key. (**ONLY IN CLEANSING MODE SETTING**)


To switch the DermaTool off hold the Power key down for 3 SECONDS

MICRODERMABRASION MODE (no timer in this mode):

1. Hold the Power key down for 3 seconds to switch on. Press the Power key again and the power light will flash to indicate **MICRODERMABRASION MODE**.
2. Select the desired speed by pressing the Speed button (1-2-3 SPEEDS, 3 BEING THE LOWEST). Gently move the foam head around the face in small circular motions.

KEY FEATURES OF YOUR DERMATOOL

- 300 vibrations per minute
- 2 modes (Cleansing & Microdermabrasion)
- 6 speeds
- 2 heads (interchangeable foam and brush attachments)
- Waterproof - can be used in the shower
- Full charge allows up to 1-1.5 hours of use
- Built in intelligent timer
- 1 year warranty

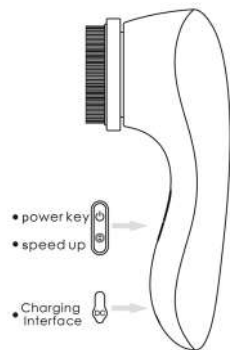

WARNING

Do not use:

- if you have eczema or any other dermatological skin conditions
- on broken, inflamed or infected skin
- if you are taking any medication that can cause skin sensitivity (e.g. Accutane)
- around the eye area
- if you are under the age of 14

You may experience breakouts initially due to deep cleansing of the pores. Always use your own brush and foam head - do not share with others.

www.dermatx.co.uk

CLEANING AND STORING

1. Wash brush and foam attachments with anti-bacterial soap after use and allow to dry before storing.
2. Do not use alcohol, acetone, petrol, abrasive cleaning agents, etc. to clean the plastic parts.

The foam and brush heads should be replaced regularly, approximately every 3 MONTHS (depending on use).

DermaTx Microdermabrasion Creams, Cleansers and replacement attachments are available to purchase separately from authorised stockists or:

WWW.DERMATX.CO.UK



Advanced skincare designed for your skin

"Exfoliation is one of the most important skincare steps for healthy, radiant skin."

DERMATOOL - SONIC FACIAL TOOL MANUAL



DermaTx[®]
ADVANCED SKINCARE

MICRODERMABRASION & DAILY CLEANSING

CONTAINS

- 1x DermaTool Facial tool
- 1x Exfoliating foam head
- 1x Cleansing brush head & protective cap
- 1x USB charging cable
- 1x User manual



BEFORE USE

Before using your DermaTool charge it for a **MINIMUM OF 4 HOURS**. **KEEP AWAY FROM WATER WHILST CHARGING**. Once charged the DermaTool can be used for **1-1.5 HOURS**.

1. Open the silicone waterproof seal on the DC charging interface, insert charging cable and plug into any USB charger.
2. The charge light flashes when charging, and will become solid when fully charged.
3. When the battery charge is low, the DermaTool will beep 3 times, and will automatically switch off. It will need to be charged again before use.

www.dermatx.co.uk

ENHANCE YOUR DAILY CLEANSER

BENEFITS OF DAILY SONIC CLEANSING

- Cleanses up to **6X BETTER THAN USING YOUR HANDS** alone
- Increases product absorption
- Lifts sebum, dirt and debris
- Helps reduce the appearance of pores, fine lines & wrinkles
- Reveals smoother, softer, healthier looking skin
- Improves shaving experience with less irritation

Remove any eye make-up with your preferred eye make-up remover.

Attach **CLEANSING BRUSH HEAD** to the DermaTool, moisten both the brush head and skin with warm water. Apply your chosen DermaTx cleanser to your skin or onto the brush head. Press the power button to turn the DermaTool on for **CLEANSING MODE** and select the desired speed. Follow the timer prompts while gently moving brush in small circular motions. Gently glide the brush onto skin - Do not apply excessive pressure. The DermaTool will automatically switch off after **1 MINUTE**. Rinse skin. **USE DAILY**.

10sec



DERMATX
CLEANSER



20sec



CLEANSING
BRUSH HEAD



20sec



10sec



TIME



www.dermatx.co.uk

AT HOME MICRODERMABRASION

MICRODERMABRASION

For use with DermaTx Microdermabrasion Creams.

The massaging action of the DermaTool allows the crystals in the creams to gently exfoliate the skin and enables the active ingredients to be absorbed more easily.

Cleanse face manually (**NOT WITH A POWERED CLEANSING BRUSH**) before a DermaTx microdermabrasion treatment and rinse.

Attach the **EXFOLIATING FOAM HEAD** to the device, apply your chosen DermaTx Microdermabrasion Cream and dot onto clean damp skin (forehead, cheeks, chin, nose). Switch the DermaTool on by pressing the Power key twice for **MICRODERMABRASION MODE** and select the desired speed. Using circular motions, massage the cream into the skin working different areas of the face for 2 minutes in total. Rinse off, dry face and apply a moisturiser. Perform treatments **1-3 TIMES A WEEK** for optimal results and overall improvement of skin tone and texture.

CAUTION: SEEK ADVICE BEFORE USE IF TAKING ORAL OR TOPICAL RETINOIDS

DERMATX
MICRO CREAM



EXFOLIATING
FOAM HEAD



TIME



www.dermatx.co.uk